Remington Arms Company, Inc.
870 Remington Drive
PO Box 700
Madison, NC 27025-0700
(336) 548-8700
800-243-9700

REMINGTON

Arms Company, Inc.

MODEL 141
SLIDE ACTION REPEATING RIFLE

- Shooting Safety Commandments
- Information
- Instructions for Operation & Care of Rifle
- Components Parts Listing
- Value and Reference Book Listing

NOTE: We are pleased to accommodate your request for the Model 141 Slide Action Repeating Rifle information. The following documentation represents all information available on this model from the Remington Arms Co., Inc.

DO NOT MAKE CHANGES OR ALTERATIONS TO ANY PARTS OF A FIREARM. USE ONLY REMINGTON PARTS. NEVER MAKE AN ADJUSTMENT TO THE TRIGGER, OR CHANGE THE SHAPE OR SIZE OF THE SEAR, SEAR NOTCH, OR OTHER PARTS.

Ten Commandments of Shooting Safety

1. Always keep the muzzle pointed in a safe direction.

2. Firearms should be unloaded when not in use.

3. Don't rely on your gun's "safety".

4. Be sure of your target and what is beyond it.

5. Use correct ammunition.

6. If your gun fails to fire when the trigger is pulled, handle with care!

7. Always wear eye and ear protection when shooting.

8. Be sure the barrel is clear of obstructions before shooting.

9. Do not alter or modify your gun, and have guns serviced regularly.

10. Learn the mechanical and handling characteristics of the firearm you are using.

MODEL 141, SLIDE ACTION HIGH POWER RIFLE

COMPONENT PARTS (See Illustrations)

In ordering parts, specify model, caliber, part number, part name and serial number of rifle. All parts marked with an asterisk (*) must be fitted at factory [redacted].

Part No.		List Price
201	*Action Bar (state caliber)	$6.00
502	Action Bar Cover (state caliber)	.30
3	Action Bar Cover Screw	.10
4	Action Bar Lock	.80
5	Action Bar Lock Pin	.10
6	Action Bar Lock Spring	.10
7	Action Bar Lock Spring Case	.10
1211	*Barrel, Grade A and C (state cal.)	12.00
	Barrel, Grade D	20.00
	Barrel, Grade F	40.00
214	Bar Sight	2.00
15	Bar Sight Elevating Screw	.10
217	*Breech Block (state caliber)	6.00
217½	*Breech Block (complete)	7.50
718	Butt Plate	1.50
419	Butt Plate Screw (2), each	.10
227	Carrier (state caliber)	1.00
28	Carrier Dog	.30
29	Carrier Dog Pin	.10
30	Carrier Dog Spring	.10
31	Carrier Friction Plunger	.10
32	Carrier Friction Spring	.10
233	Carrier Lever (state caliber)	.20
34	Carrier Lever Pin	.10
35	Carrier Lever Plunger	.10
36	Carrier Lever Spring	.10
37	Carrier Pin	.10
618	Cartridge Stop	.60
45	Ejector	.60
246	Ejector Rod	.10
247	Extractor (state caliber)	.40
48	Extractor Plunger	.10
49	Extractor Spring	.10
56½	Firing Pin Complete	1.50
64	Firing Pin Catch	.20
66	Firing Pin Catch Pin	.10
67	Firing Pin Catch Spring	.10
70	Firing Pin Catch Plunger	.10
957	Fore End, Grade A (state caliber)	2.00
957	Fore End, Grade C (state caliber)	8.00
	Fore End, Grade D (state caliber)	9.00
	Fore End, Grade F (state caliber)	12.00
258	Fore End Escutcheon (2), each	.10
259	Fore End Escutcheon Screw (2), ea.	.10
177	Front Sight	.50
180	*Front Sight Ramp	.30
181	*Front Sight Ramp Pin	$ .10
268	*Guard, Grade A and C	6.00
	Guard, Grade D	16.00
	Guard, Grade F	20.00
275	Loading Door (state caliber)	1.50
76	Loading Door Pin	.10
477	Loading Door Plunger	.10
278	Loading Door Spring	.10
585	Magazine Follower (state caliber)	.20
173	Magazine Plug	.40
87	Magazine Plug Screw	.10
# 588	Magazine Ring	.60
89	Magazine Screw	.10
690	Magazine Spring (state caliber)	.20
291	Magazine Tube (state caliber)	2.50
92	Main Spring	.10
93	Main Spring Plug	.10
97	Plug Screw (2), each	.10
110	*Receiver, Grade A and C	14.00
	Receiver, Grade D	50.00
	Receiver, Grade F	100.00
112	Receiver Bushing, plain	.10
113	Receiver Bushing, threaded	.10
2121	Safety	.20
2136	Safety, left hand	.20
122	Sear	.75
123	Sear Lock	.20
124	Sear Lock Pin	.10
125	Sear Lock Plunger	.10
126	Sear Lock Spring	.10
127	Sear Pin	.10
2228	*Stock, Grade A	6.00
	Stock, Grade C	20.00
	Stock, Grade D	30.00
	Stock, Grade F	60.00
130	Stock Bolt	.20
171	Stock Bolt Lock Washer	.10
131	Stock Bolt Washer	.10
137	Take-Down Screw	.20
139	Trigger	.60
140	Trigger Bushing	.10
141	Trigger Spring	.10
142	Trigger Spring Cap	.10
143	Trigger Spring Rod	.10
150	Unlocking Plunger	.10

NOTE "#" SUPPLY EXHAUSTED

REMINGTON ARMS COMPANY, INC.

ILION, NEW YORK, U.S.A.

GAMEMASTER, KLEANBORE and **REM** are Reg. U. S. Pat. Off. by Remington Arms Co., Inc.
RUSTLESS is Reg. U. S. Pat. Off. by Peters Cartridge Division.

INSTRUCTIONS

FOR

OPERATION AND CARE

OF THE

Remington

MODEL 141 SLIDE ACTION REPEATING RIFLE

THE GAMEMASTER

REG. U.S. PAT. OFF.

MODEL 141

SOLID BREECH
HAMMERLESS

SLIDE ACTION
TAKE-DOWN

This rifle is targeted to shoot center at 100 yards with the rear sight set in the lowest notch and using the REMINGTON EXPRESS cartridge.

REMINGTON ARMS COMPANY, INC.

ILION, NEW YORK, U.S.A.

Remington

Remington

Remington

"NO Parts available From

Remington"

INSTRUCTIONS FOR THE OPERATION AND CARE

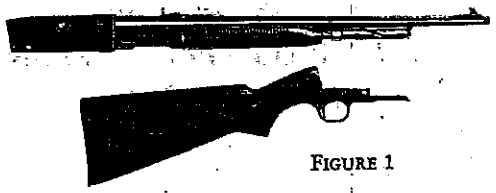

FIGURE 1

This model is shipped from the factory taken down, as shown in Fig. 1.

Put Rifle Together:

See that take-down screw is unscrewed and pulled out to its stop; put trigger guard into receiver by engaging ribs of guard with slots in rear of receiver, Fig. 2, grasp receiver and guard firmly to force them together, push take-down screw in and turn it tightly. Fig. 3.

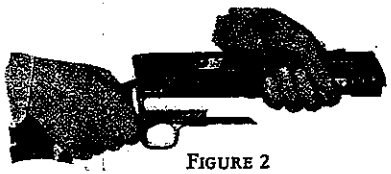

FIGURE 2

Load Magazine:

Turn rifle bottom up. Insert end of bullet into space at front end of loading door, pushing magazine follower forward with cartridge until head enters magazine. The first cartridge will pass to rear under loading door. Insert next bullet against magazine follower as before and push cartridge in until head will catch against notch in loading door, then put in more cartridges until five are in magazine.

FIGURE 3

Load Barrel From Magazine:

Press button in breech block, at the same time move fore end fully rearward, the first cartridge will now be moved upward and into barrel when fore end is moved fully forward. Rifle is now cocked and ready to fire. Another cartridge may now be inserted into magazine making six in the rifle.

Safety:

Safety is located at rear of trigger. Push from left to right until red band is covered.

Fire:

Move safety from right to left until red band is exposed, indicating danger. Pull trigger to fire.

Repeat:

The mechanism is automatically unlocked by pulling the trigger. Pull fore end fully rearward to extract and eject empty shell, then close action.

Single Load:

When magazine is entirely empty and a single shot is desired, a cartridge may be loaded directly into the barrel. Press unlocking button in breech block and open action, insert cartridge into barrel and close action rapidly to insure proper engagement of extractor claw over shell head.

Unload Rifle Without Firing:

When barrel and magazine are loaded and it is desired to unload the rifle completely, set safety on to lock trigger, press unlocking button, open action to eject cartridge from barrel, close action and repeat motion until magazine is empty. It is not necessary to fully close the action but only far enough to release next cartridge from cartridge stop which causes a slight click, then open action to eject cartridge.

Take-Down:

Grasp receiver and guard firmly to force them together, unscrew take-down screw and pull to its stop or nearly out of receiver, tip slightly to left to prevent screw from slipping back into receiver, slide guard with stock attached downward from receiver, Fig. 2.

Remove Breech Block:

Open and close action to cock firing pin. Turn rifle bottom up.

It is advisable to remove breech block from receiver when cleaning barrel so that a clear view may be had through bore of barrel. Pull take-down screw out to its stop, open action, grasp rear end of breech block, tilt it slightly upward and move fore end forward, then lift breech block from receiver. Fig. 4.

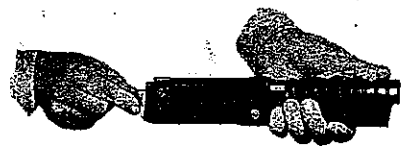

FIGURE 4

Replace Breech Block:

Pull out take-down screw, move fore end forward, put breech block into receiver, being sure to have lug of breech block in recess of receiver, move fore end rearward to engage action bar with breech block while pressing ejector which protrudes from rear end of breech block to cause action bar lock to clear action bar. Now move both breech block and action bar together forward.

CARE OF RIFLE

Exclusive use of Remington KLEANBORE or Peters Rustless Ammunition will reduce the amount of care necessary to keep rifle in good condition. The bore of barrel will not rust and will not need cleaning.

However, if old-fashioned ammunition is used, the bore should be cleaned as soon as possible after shooting to prevent powder residue from causing rusting and pitting.

Cleaning can be well done by scrubbing bore with a brass wire or a bristle brush saturated with Remington Powder Solvent. Wipe clean and dry until no stain is removed by a clean cloth, then lubricate with Rem Oil. Repeat wiping and oiling again in a day or two. If rifle is to be stored for a longer time, Remington Gun Grease is recommended.

If Remington Powder Solvent is not available, pour about one pint of boiling water through bore of barrel, using a small funnel to prevent spilling upon fore end. Wipe clean and dry, then oil thoroughly.

Always wipe grease from bore before firing to prevent swelling or bursting barrel, because heavy grease causes so much resistance to rapid motion of bullet as to act like an obstruction.

If rifle is used in Arctic or sub-zero temperature, all thin oil should be wiped from inside the action and powdered graphite be used as a lubricant. At the end of a day's hunting wipe off exterior of rifle with an oily cloth.

Always insert wiping rod from breech end of barrel to prevent any wear of rifling at muzzle or cause inaccurate shooting.

SIGHT ADJUSTMENT

The purchaser of a rifle should test alignment of sights before starting on a hunting trip, and adjust them for the particular kind of shooting expected. If big game is sought in open places where most shots are made at long range, the sights may be adjusted for such distances, and aim be taken at a lower point on nearby objects. When hunting in wooded country, the sights may be adjusted for shorter ranges, and a long shot be made by aiming at a high point on distant objects; or the sights may be quickly adjusted for the estimated distance by moving the rear sight step into the proper notch.

If, in targeting the rifle, the shots group too high, remove rear sight step, and turn set screw in rear sight bar to left until shots group properly. If shots group too low, turn set screw to right. Place slot in screw crosswise of barrel and replace step. One-half turn of set screw raises or lowers point of impact approximately 2 inches at 100 yards.

Should the shots group to right, move rear sight to left, or front sight to right. If shots group to left, move rear sight to right, or front sight to left.

The value of change per notch elevation of rear sight step varies with the load used. The shooter should familiarize himself with the effects of adjustment.

DISMOUNTING AND ASSEMBLING

See Sectional views for location of parts.

Breech Block:

Open and close action to cock rifle. Take down the rifle. Press unlocking plunger to remove block, grasp breech block with bottom up and sear extending outward, strike sear smartly with a screw driver handle to disengage sear and uncock firing pin. Move ejector to middle position in left side and lift from slot in breech block. Push ejector rod forward from block. Push out unlocking plunger. Drive out sear lock pin (the smaller one near bottom) crosswise from block and take out sear lock, spring and plunger. Drive out action bar lock pin and remove action bar lock with spring and plunger. Drive out sear pin, being careful to retain sear, main spring and main spring plug. Remove firing pin. Remove extractor by inserting small screw driver blade between rear end of extractor and extractor plunger, press plunger rearward to clear extractor, push screw driver blade deeper and pry out extractor from breech block.

Assemble all these parts in reverse order, being careful to align all parts to show clear passage through before driving in pins.

Butt Plate:

Take out two screws.

Stock:

Unscrew stock bolt with long screw driver in deep hole under butt plate and pull stock off guard.

Guard Components:

Drive out carrier dog pin from right to left and lift out carrier dog and spring. Action bar supports may be lifted out. Drive out firing pin catch pin. Lift out firing pin catch with spring and plunger.

Drive out trigger bushing and remove trigger, trigger spring with rod and cap. Safety may be pushed from guard.

Fore end:

Remove two fore end screws. Remove magazine plug screw, plug, magazine spring and follower. Slide action bar with magazine tube rear-

ward in receiver and fore end. Remove action bar cover screw and cover from front end of receiver. Tip barrel downward to remove cartridge stop. Pull action bar from rear of receiver.

Action Bar:

Remove magazine screw from bottom of action bar, unscrew tube. Drive out loading door pin and remove loading door with spring and plunger. Drive out carrier pin and remove carrier with carrier friction plunger and spring in side of carrier.

Carrier:

Remove carrier friction spring and plunger. Drive out carrier lever pin and remove carrier lever with spring and plunger.

Assembling:

All parts in reverse order, being careful to align all holes to show a clear passage before putting in screws or pins.

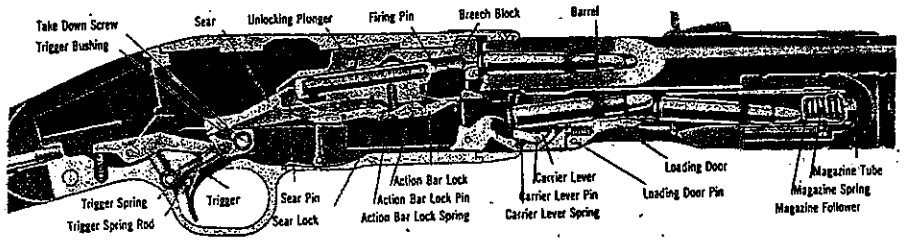

ACTION CLOSED

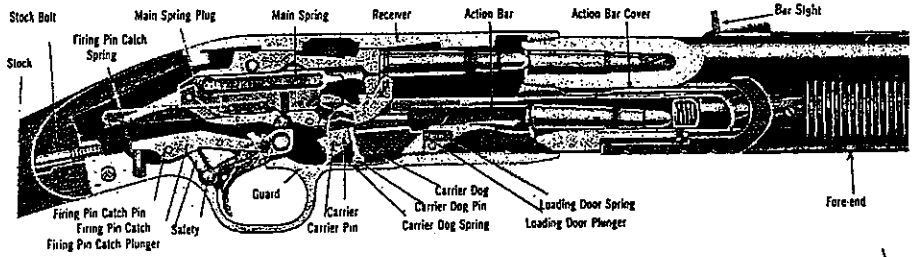

ACTION OPEN

Discontinued
No parts
available From
Remington

COMPONENT PARTS (See Lists)

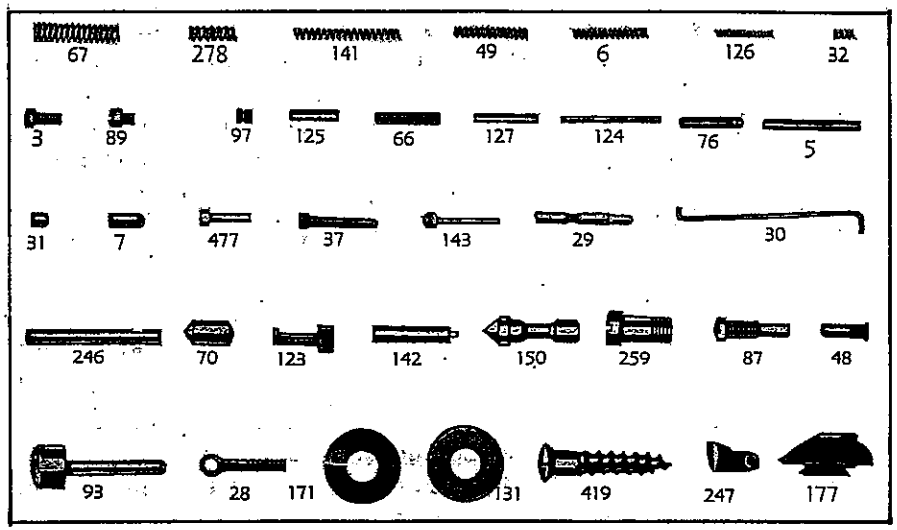

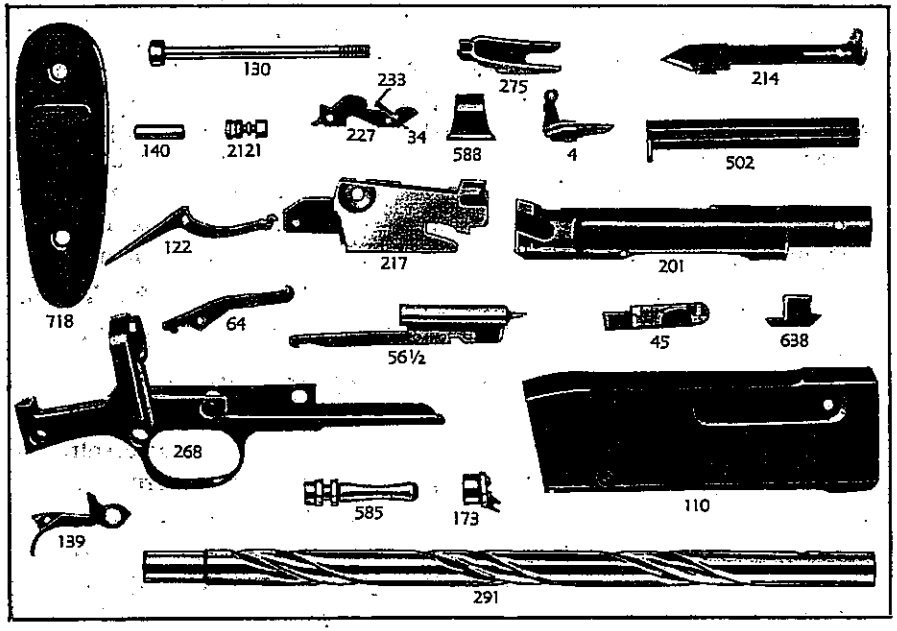

Firearms Value & Reference Books

NOTE: We do not provide information on firearms' values. You may want to have your firearm appraised by a gunsmith. The following sources may also be helpful. We do not accept responsibility for the goods or services provided by these sources.

Firearms Value Books

Blue Book of Gun Values
Blue Book Publications
8009 34th Avenue South #175
Minneapolis, MN 55425
800-877-GUNS

Flayderman's Guide to Firearm Values

Gun List

Modern Gun Values
Krause Publications
700 East State Street
Iola, WI 54990-0001
847-573-8530

Gun Trader's Guide
Stoeger Publishing Company
5 Mansard Court
Wayne, NJ 07470
973-872-9500

Reference Books

The Remington 700
John Flacy
Brownells, Inc.
200 South Front Street
Montezuma, IA 50171
515-623-5401

Cartridges of the World
Frank C. Barnes

Standard Catalog of Firearms
Krause Publications
700 East State Street
Iola, WI 54990-0001
847-573-8530

Shooter's Bible
Stoeger Publishing Company
5 Mansard Court
Wayne, NJ 07470
973-872-9500

Remington, America's Oldest Gunmanker
Remington Arms Co.
PO Box 700
Madison, NC 27025
Attention: History Book
800-423-8495